

INSTALLATION INSTRUCTION FOR FIRE COVER (FIRECVR)

For use over IC-rated incandescent and fluorescent housings with 6 ½" max dia. and 7" max high and 7 ½" x 10" max frame size. Not to exceed the ratio of 1 per 25 sq ft of total ceiling area (min 3 ft separation).


1- Aligning the cover

Inside the cover there is a half round dark grey intumescent pad which has to be positioned directly over the can. Leave the beige colored area without padding over the junction box (see picture)



2- Fitting the cover over the fixture hanger bars

Place the FIRECVR over the fixture.
Cut four small slits at the bottom of the cover just deep enough to fit over the hanger bars of the fixture and enable the cover to sit flush over the drywall or ceiling tile.

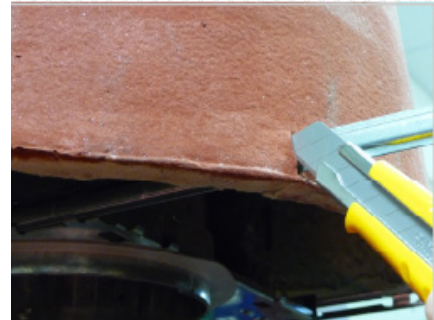

3- Installing and wiring the light fixture

Install the light following closely the manufacturer's instructions. The wire can be fed through the side of the cover closer to the junction box. Due to the nature of the product it is easy to poke the wire through the material or cut a small opening with a knife. Follow the light manufacturer's instructions to make proper connections.



4- Final check

Check for secure fit, make sure the cover overhangs the hanger bars. The bottom of the FIRECVR should be in full contact with the back of the drywall board or ceiling tile.

