



**WARNING:**

Risk of electric shock. Before wiring to power supply, turn off electricity at the fuse or circuit breaker box.

**CAUTION:**


For your safety read and understand instructions completely before starting installation. Installation requires knowledge of luminaires electrical system. If not qualified, DO NOT attempt installation. Contact a qualified electrician if necessary.

**NOTE:** ELK19 & ELK21 Architectural Koto™ LED Modules are best compatible with ELCO Housings and other ELCO fixtures

**Architectural Koto™ Module to Trims and Recessed Housing Installation Instruction:**

**Step 1**

Install Architectural Koto™ Module and trim using twist-on mechanism.

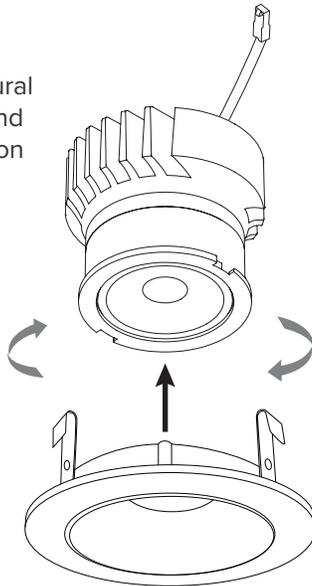

**Step 2**

Mate the connector on module with the connector from recessed housing. Follow by inserting module with trim assembly into housing.

