



WARNING:

Risk of electric shock. Before wiring to power supply, turn off electricity at the fuse or circuit breaker box.

CAUTION:


For your safety read and understand instructions completely before starting installation. Installation requires knowledge of luminaires electrical system. If not qualified, DO NOT attempt installation. Contact a qualified electrician if necessary.

NOTE: EKCL21 Architectural Koto™ LED Modules are best compatible with ELCO Mounting Frames and ELCO Twist-On Trims

Architectural Koto™ LED Module to Trims and mounting Frames/Power Packs Installation Instruction:

Step 1

Install Architectural Koto™ Module and trim using twist-on mechanism.

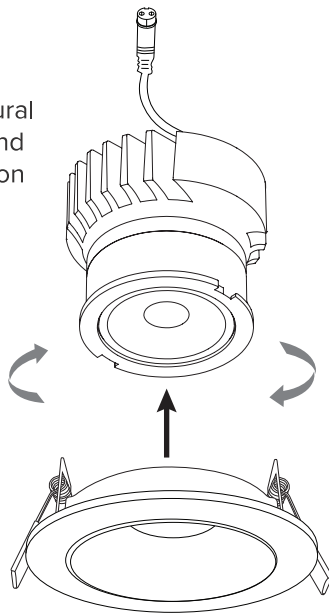

Step 2

Mate the cable on module with the cable from mounting frame. Follow by inserting module with trim using installations clips on trim.

