



WARNING:

Risk of electric shock. Before wiring to power supply, turn off electricity at the fuse or circuit breaker box.

CAUTION:


For your safety read and understand instructions completely before starting installation. Installation requires knowledge of luminaires electrical system. If not qualified, DO NOT attempt installation. Contact a qualified electrician if necessary.

NOTE: ELK19, ELK21 & ELK35 Architectural Koto™ LED Modules are best compatible with ELCO Housings and other ELCO fixtures

Architectural Koto™ Module to Trims and Recessed Housing Installation Instruction:

Step 1

Install Architectural Koto™ Module and trim using twist-on mechanism.

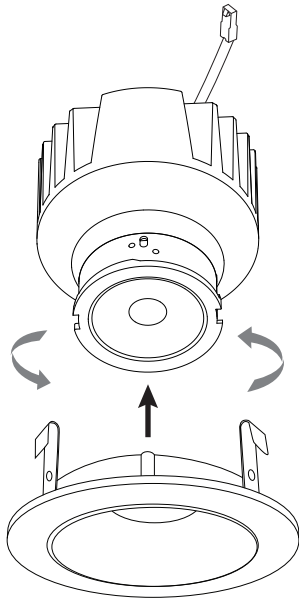

Step 2

Mate the connector on module with the connector from recessed housing. Follow by inserting module with trim assembly into housing.

