



## ELCO - ELJ444C - 4" Deep Metallic Outlet Box

For your safety, read and understand instructions completely before starting installation. Before wiring to power supply, turn off electricity at the fuse or circuit breaker box.

The electrical product contained herein is designed to meet the requirements of UL 514A and the current NFP regulations as published in the NEC. Specific modifications and revisions in your area may differ from this standard. Compliance with local building and electrical codes must be confirmed before installation.

**WARNING** - Risk of fire or electric shock. Installation of this fixture assembly requires a person familiar with the construction and operation of the fixture's electrical system and the hazard involved. If not qualified, do not attempt installation. Contact a qualified electrician.

**WARNING** -To prevent wiring damage/abrasion, do not pinch or damage exposed wiring during installation. Keep away from edges of sheet metal or other sharp objects.

### Poured Concrete Ceiling Installation



**Step 1.** Use the included template or trace an outline of the metallic outlet box to mark cutting lines on the temporary wooden board.

**Step 2.** Accurately cut appropriate size hole in the temporary wooden board.

**Step 3.** Insert the metallic outlet box through the temporary wooden board (**Figure 1**).

**Step 4.** Secure the metallic outlet box onto the temporary wooden board with two (2) #8 size screws.

**Step 5.** Pour the concrete, once dried remove the temporary wooden board.

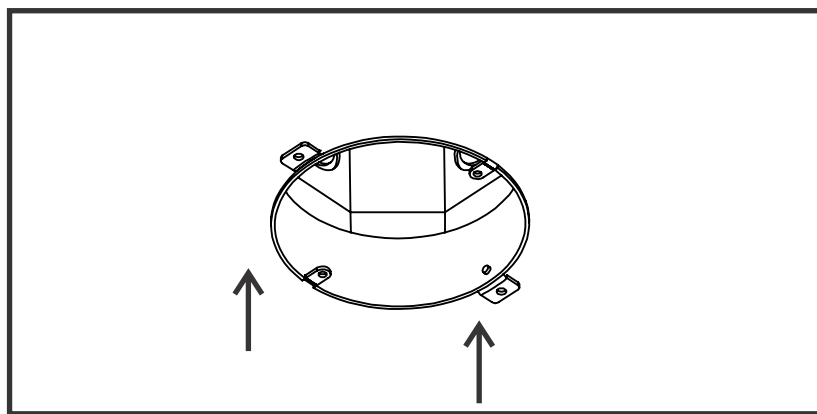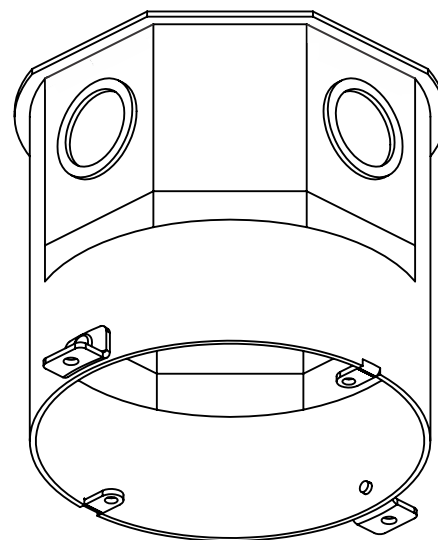

**Figure 1**